

# EnGenius®

## Quick Installation Guide

- (A) Connect one end of the Ethernet cable into the LAN (PoE) port of the Access Point and the other end to the PoE port on the PoE Adapter.
- (B) Connect the Power cord with the PoE Adapter and plug the other end into an electrical outlet.
- (C) Connect the second Ethernet cable into the LAN port of the PoE Adapter and the other end to the Ethernet port on the computer.

\* Ensure to use cat5/cat5e UTP/STP RJ45 Ethernet cables.

