

# Quick Installation Guide

EnStation2  
EnStation5  
EnStationAC  
EnStation5-AC  
Version 1.2

Outdoor Customer Premises Equipment

## Package Contents




## Minimum Requirements

- Broadband Internet Service (Cable or DSL Modem)
- Internet Browser (Internet Explorer, Safari, Firefox, Chrome)

## 1 Connecting the CPE


- Remove the rear bottom panel.
- Connect one end of the Ethernet cable into the LAN(PoE) port of the CPE and the other end to the PoE Port on the PoE Adapter.
- Connect the Power cord to the PoE Adapter and plug the other end into an electrical outlet.
- Connect the second Ethernet cable into the LAN port of the PoE Adapter and the other end to the Ethernet Port onto the computer.
- Place the panel removed from step A back into the device.

**Note:**  
• The EnStations should ONLY be powered via Ethernet cable connected to included Proprietary PoE Adapter.  
• For EnStation AC, The 2nd Ethernet port of the EnStation AC can supply the 802.3af power source when used with the included PoE Adapter.

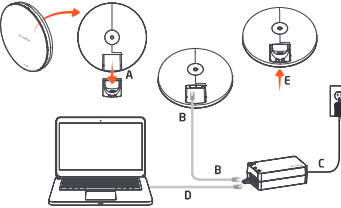


## 2 IP Address Configuration

 - Once your computer is on, ensure that your TCP/IP is set to **On** or **Enabled**. Open **Network Connections** and then click **Local Area Connection** and then click **Select Internet Protocol Version 4 (TCP/IPv4)**.




- If your Computer is already on a network, ensure that you have set it to a Static IP Address on the interface.

(Example: 192.168.1.10 and the Subnet Mask address as 255.255.255.0)

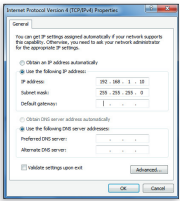


## 3 CPE Setup

 - To configure the CPE, open a web browser. In the address bar of the web browser, enter **192.168.1.1** and hit enter.



- A login screen will appear. By default, the username of the CPE is **admin** and the password is **admin**. Enter the current username and password of the CPE and then click **Login**.

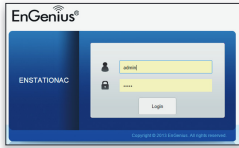


## 4 Switching Modes

- The device can operate in the following modes: Access Point, Client Bridge and WiDS.
- Click on the **Operation Mode** link under the **System Properties**.

EnStationAC/EnStation5-AC




EnStation2/EnStation5

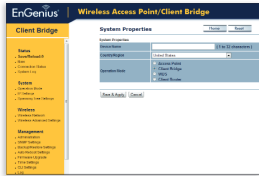


## Wall Mounting the CPE

- Put the included rubber into the bracket.
- Plug the dynamic stick into the bracket.
- Screw the sealing nut and assembled parts, as well as tighten it.
- Put the lock washer on the dynamic stick.
- Assemble the mounting parts to the CPE.

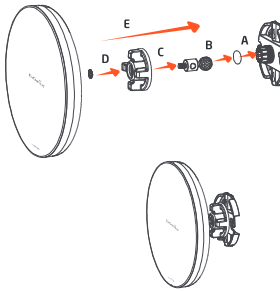


- Determine the mounting location. Mark and drill two pilot holes aligning to the screw holes of the bracket.
- Put wall anchors into the holes and insert screw into the wall anchor.
- Screw and secure the bracket in place.

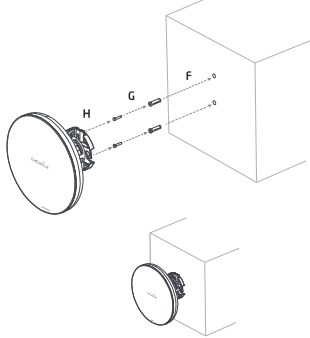


## Pole Mounting the CPE

- Put the included rubber into the bracket.
- Plug the dynamic stick into the bracket.
- Screw the sealing nut and assembled parts, as well as tighten it.
- Put the lock washer on the dynamic stick.
- Assemble the mounting parts to the CPE.

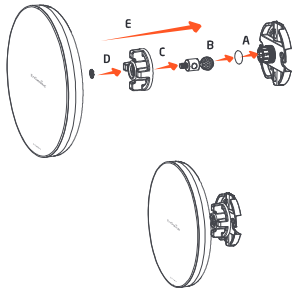

- Thread the open end of the pole strap through the two tabs on the bracket.
- Lock and tighten pole strap to secure bracket to the pole.

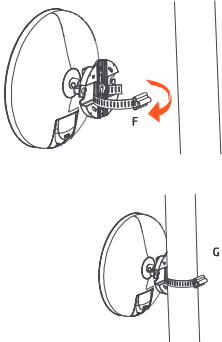


## Technical Support

Country of Purchase	Service Center	Service Information
<b>North America</b> www.engenius.com.us	<b>Canada</b>	email: support@engenius.com Toll Free: (+1) 888 397 2788 Local: (+1) 855 940 8101
www.engenius.com	<b>Los Angeles, USA</b>	support@engenius.com Toll Free: (+1) 888 725 7888 Local: (+1) 714 432 8688
<b>Central &amp; South America</b> usa.engenius.com pg.engenius.com	<b>Miami, USA</b>	miamisupport@engenius.com Miami: (+1) 305 887 7378 San Paulo: Brazil: (+55) 11 3957 9393 DF, Mexico: (+52) 55 1169 8894
<b>Europe</b> www.engenius.com.eu	<b>Netherlands</b>	support@engenius.com (+31) 40 620 887
<b>Africa</b> <b>CIS</b> <b>Middle East</b> <b>Russia</b> www.engenius-me.com	<b>Dubai, UAE</b>	support@engenius-me.com Toll Free: U.A.E: 800-EnGenius Greece: (+971) 4 357 5599
<b>Asia</b> <b>Oceania</b> www.engenius.com.sg	<b>Singapore</b>	www.engenius.com.sg/eng_warranty_form techsupport@engenius.com.sg Toll Free: Singapore: 1800 364 3648
<b>Others</b> www.engenius.com	<b>Taiwan, R.O.C.</b>	techsupport@engenius.com

## Notes

 Maximum data rates are based on IEEE 802.11 standards. Actual throughput and range may vary depending on many factors including environmental conditions, distance between devices, radio interference in the operating environment, and mix of devices in the network. Features and specifications subject to change without notice. Trademarks and registered trademarks are the property of their respective owners. For United States of America: Copyright © 2017 EnGenius Technologies, Inc. All rights reserved.



Dimension:成型108\*140mm  
Material:80磅模造紙  
Tolerance:+/-1mm  
Ink:單色黑印刷

部門	外觀設計課			料號	6709A3024290		
日期	2017/03/03	比例	1/1	單位	mm	工業設計工程師	Mandy
該專案經理人或業務之內容核准		Douglass		檢圖	Rennier		

Senso Networks, Inc.